

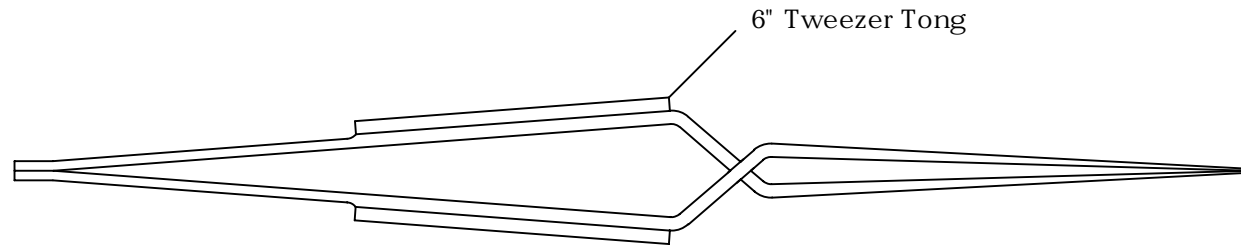



## Cryotong Soldering Assy.

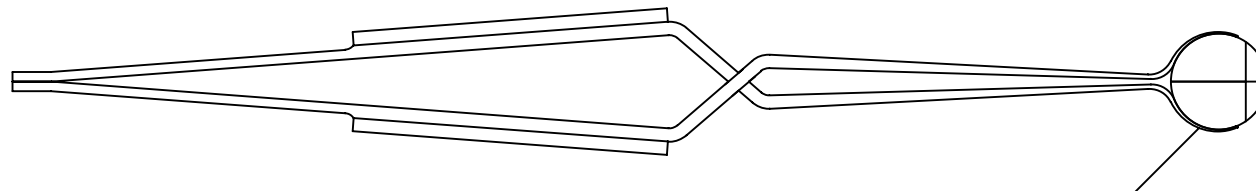

Heat and bend tong to a  $1\frac{1}{4}$ " rad. to fit pin holder

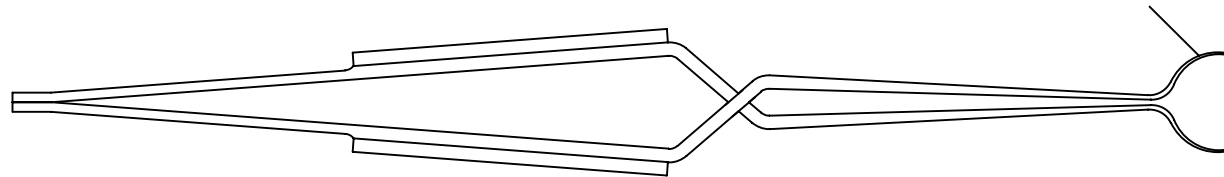

Silver solder pin holder halves (finished to external dim. only) to radius ed tong

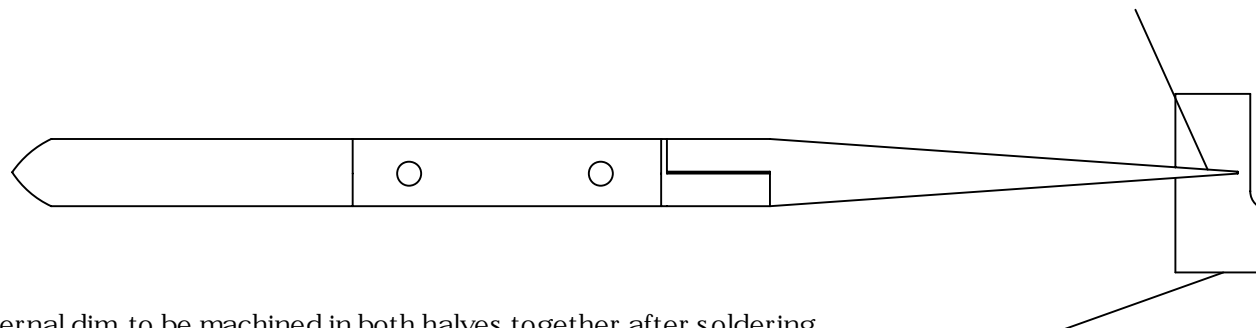

Note : Internal dim. to be machined in both halves together after soldering